

HUBBA HUBBA™ NX

Assembly Instructions




PACKAGE INCLUDES:

Frame assembly, tent body, rainfly, stakes


1 PREPARE FOR SETUP

1. Spread tent out and stake out four corners tightly.
2. Assemble poles.

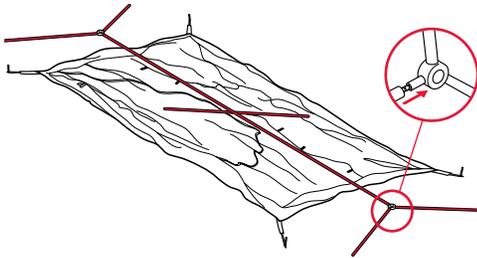


2 ATTACH HUBBED POLES

1. Insert tips of two hubbed poles into grommets at one end of tent floor, followed by the remaining two at the other.
2. Insert short ridge pole into two grommets at midpoint of tent ceiling.

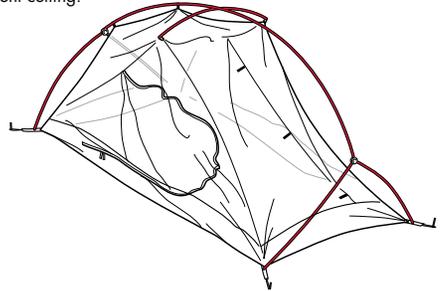


3 ATTACH CLIPS

1. Attach clips to pole along length of tent and ridge pole.

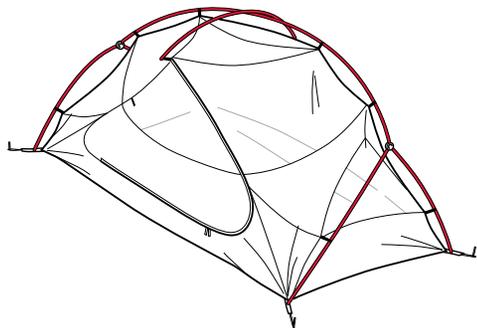

4 ATTACH RAINFLY

1. Lay rainfly over tent, aligning red webbing to red stake loops, gray webbing to gray stake loops. Attach the rainfly's midpoint grommets to ridge pole.
2. Stretch out vestibule until taut and stake down, making sure seams align with frame.

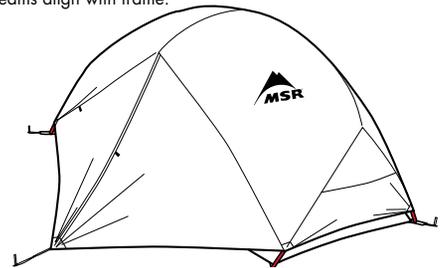

USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. For complete care and use instructions, refer to the Owner's Manual (available at www.msrgear.com/HubbaHubbaNX).



MOUNTAIN SAFETY RESEARCH®

© 2016 Cascade Designs, Inc.

4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 | 1-206-505-9500